






 




























Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	Setup		Setup / OPT /
	Zoom		Zoom / Size
	Rotate		Picture / Format
	Info		Info / Angle
	Repeat		Shift + Green / APP /
	Goto		Text / Goto
	Edit		D.Menu / Top
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Browser		AV / Input / RDS
	Movie		TV/Radio /
	Photo		Smart / List
	Music		Sound / Title
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originale	Sostituto	Originale	Sostituto
	Stop		Stop / Hold
	Home		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	>>		>> / Preset+
	Vol-		Vol-
	<<		<< / Preset-
	1		1
	2		2
	3		3
	>>		>> / Tune+
	4		4





	Originale	Sostituto		Originale	Sostituto
	5	TAPE 5	5		
	6	TUNER 6	6		
	<<	TUNE- <<	<< / Tune-		
	7	AUX - HDD 7	7		
	8	USB 8	8		
	9	BLUETOOTH 9	9		
	0	HDMI - BAT 0	0		
	Red/HDMI	NETFLIX SEARCH	Red / Netflix / Search		
	Blue/AV	Prime Video RANDOM	Blue / Prime Video / Random		
	Green/Copy	APP REPEAT	Green / APP / Repeat		
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat		

	Originale	Sostituto		Originale	Sostituto

