



Originale	Sostituto
Open/Close	Eject / Surround
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Search	Red / Netflix / Search
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Pause	Pause / Step / Freeze

Originale	Sostituto
Play	Play / Slow
Stop	Stop / Hold
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>I	>>I / Preset+
Up	Up
Left	Left
Enter	OK
Right	Right
Top Menu	D.Menu / Top
Down	Down
Menu	Menu / Home
Clear	Exit / Cancel / Clear
Display	Display / Media
Return	Back / Return
Mode	Text / Goto









 









 

 
 



 





 
Originale	Sostituto
SETUP	Setup
HDMI	Setup / OPT /
ZOOM	Setup / OPT /
	SHIFT + HDMI - BAT 0 Shift + 0
	SIZE ZOOM Zoom / Size

Originale	Sostituto








 



Originale	Sostituto
 Open/Close	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Search	 Red / Netflix / Search
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze

Originale	Sostituto
 Play	 Play / Slow
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down
 Menu	 Menu / Home
 Clear	 Exit / Cancel / Clear
 Display	 Display / Media
 Return	 Back / Return
 Mode	 Text / Goto





Originale	Sostituto
 Setup	 Setup / OPT /
 HDMI	 +  Shift + 0
 Zoom	 Zoom / Size

Originale	Sostituto

