




 


 
 
 
 

 



 







Originale	Sostituto
 Input	 AV / Input / RDS
 Power	 Power
 3D	 Setup / OPT /
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 O)/I/II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AD	 Sound / Title
 0	 0

Originale	Sostituto
 ATV/DTV	 Smart / List
 Vol+	 Vol+
 [≡i]/[i+ ]	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Quick	 Display / Media
 Guide	 Guide / EPG / -/--
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return





Originale		Sostituto		Originale		Sostituto	
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	[≡?]		Play / Slow				
	[≡□]		Stop / Hold				
	[≡↕]		Zoom / Size				
	[⊖] / [≡X]		Pause / Step / Freeze				

