

 













 





















Originale	Sostituto
 On	 Power
 Off	 Shift + Power
 N	 Smart / List
 R	 Display / Media
 [ + ]	 Info / Angle
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 ■	 OK
 Pos/Size	 Shift + Zoom /
 [ ]/Picture	 Picture / Format
 J/Sound	 Sound / Title
 Set Up	 Setup / OPT /
 Input 1	 Red / Netflix / Search
 Input 2	 Green / APP / Repeat
 Input 3	 Yellow / YouTube / Repeat

Originale	Sostituto
 PC	 Fav / Marker / PC
 Input	 AV / Input / RDS
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0













Originale	Sostituto
 C ID Set	 +  Shift + Setup / OPT / Tools
 -/-- ID All	 Guide / EPG / -/--
 [ + ]/Aspect	 +  Shift + Picture / Format
 Surround	 Eject / Surround
 Off Timer	 Exit / Cancel / Clear
 Multi PIP	 D.Menu / Top
 Swap	 Back / Return
 Select	 +  Shift + OK
 Zoom/Movie	 Zoom / Size


















Originale	Sostituto







Originale	Sostituto
On	 Power
N	 Smart / List
R	 Display / Media
[ + ]	 Info / Angle
Off	 Shift + Power
■	 OK
Up	 Up
Down	 Down
Right	 Right
Left	 Left
Input 1	 Red / Netflix / Search
Input 2	 Green / APP / Repeat
Input 3	 Yellow / YouTube / Repeat
PC	 Fav / Marker / PC
Input	 AV / Input / RDS
Mute	 Mute / Dimmer
CH+	 CH+ / Page+

Originale	Sostituto
CH-	 CH- / Page-
Vol+	 Vol+
Vol-	 Vol-
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
0	 0
[ ]/Picture	 Picture / Format
J/Sound	 Sound / Title
Set Up	 Setup / OPT /
Pos Size	 Text / Goto





Originale	Sostituto	
[+]/Aspect	+	Shift + Picture / Format
Surround		Eject / Surround
Off Timer		Exit / Cancel / Clear
Multi PIP		Zoom / Size
Swap		Back / Return
Zoom/Movie		TV/Radio /

Originale	Sostituto

