

 


 




 

 



 











 
 



 












Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Subtitle	 Subtitle / EQ
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Originale	Sostituto
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Home	 Shift + Menu /
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 TV	 TV/Radio /
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-





Originale

Sostituto

	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	[i+]		Info / Angle
	>>		>> / Tune+
	Media		Display / Media
	prime video		Shift + Blue / Prime
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /

Originale

Sostituto

