









Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Preset/Folder Up	 CH+ / Page+
 Vol+	 Vol+
 Preset/Folder	 CH- / Page-
 Function	 Menu / Home
 Vol-	 Vol-
 Sleep	 Sleep / Timer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Tun-/l<<</<<	 << / Tune-
 Stop	 Stop / Hold
 >>/>>I/Tuner+	 >> / Tune+
 Repeat	 Green / APP / Repeat
 Program/Memo	 TV/Radio /
 RDS	 AV / Input / RDS
 PTY	 Picture / Format

Originale	Sostituto
 PTY Search	 Red / Netflix / Search
 EQ	 Subtitle / EQ
 XDSS Plus	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 MP3 Info	 Info / Angle
 7	 7
 8	 8
 9	 9
 0	 0

