












 





 

 

 



















Originale	Sostituto
 Power	 Power
 CD	 3
 Tape 1/2	 5
 Tuner	 6
 AUX	 7
 DBB	 Guide / EPG / -/--
 DSC	 Fav / Marker / PC
 Volume+	 Vol+
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 >	 >> / Preset+
 <	 << / Preset-
 >>	 >> / Tune+
 <<	 << / Tune-
 Program	 TV/Radio /

Originale	Sostituto




 


Originale	Sostituto
 Power	 Power
 CD	 3
 Tape 1/2	 5
 Tuner	 6
 AUX	 7
 CD Direct 1	 1
 CD Direct 2	 2
 CD Direct 3	 4
 DBB	 Guide / EPG / -/--
 DSC	 Fav / Marker / PC
 Volume+	 Vol+
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 >	 >> / Preset+
 <	 << / Preset-

Originale	Sostituto
 Stop	 Stop / Hold
 >>	 >> / Tune+
 <<	 << / Tune-
 Repeat	 Green / APP / Repeat
 Shuffle	 Blue / Prime Video / Random
 Program	 TV/Radio /



 


Originale	Sostituto
 Power	 Power
 CD	 3
 Tape 1/2	 5
 Tuner	 6
 AUX	 7
 DBB	 Guide / EPG / -/--
 DSC	 Fav / Marker / PC
 Volume+	 Vol+
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 >	 >> / Preset+
 <	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 <<	 << / Tune-

Originale	Sostituto



**Originale****Sostituto**

	Power		Power
	CD		3
	Tape 1/2		5
	Tuner		6
	AUX		7
	DBB		Guide / EPG / -/--
	DSC		Fav / Marker / PC
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer

Originale**Sostituto**

