


Originale		Sostituto		Originale		Sostituto	
	Power		Power		9		9
	TV		Smart / List		Sol-		<< / Tune-
	Text		Text / Goto		Sol+		>> / Tune+
	Source 2		Shift + AV / Input / RDS		=>		Shift + CH- /
	Source 1		AV / Input / RDS		0		0
	1		1		- / - / =>		Shift + CH+ /
	2		2		- / - / =>		Guide / EPG / - / -
	3		3		Fa-		Left
	Contrast-		I<< / Preset-		Fa+		Right
	Contrast+		>>I / Preset+		Vol-		Vol-
	4		4		Vol+		Vol+
	5		5		><-		CH- / Page-
	6		6		><+		CH+ / Page+
	Brightness-		Down		OO		Sound / Title
	Brightness+		Up		I-II		Audio / Lang I/II
	7		7		[]		Zoom / Size
	8		8		Mute		Mute / Dimmer

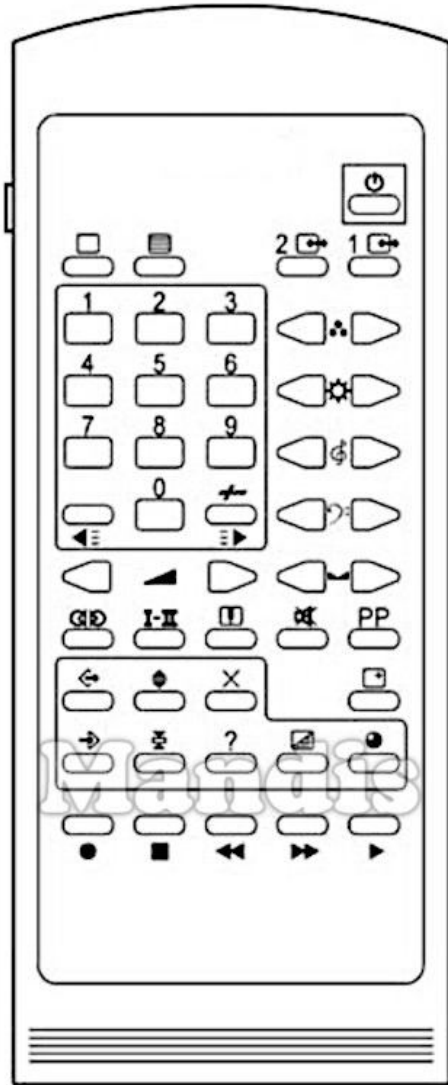



	Originale	Sostituto	Originale	Sostituto
1	PP	Back / Return		
2	Exit	Exit / Cancel / Clear		
3	Size	+ Shift + Zoom /		
4	Cancel	+ Shift + Exit / Cancel / Clear		
5	[+]	Info / Angle		
6	Enter	OK		
7	Hold	Stop / Hold		
8	Reveal	TV/Radio /		
9	Mix	+ Shift + Text /		
10	Subcode	Subtitle / EQ		

