 

 

 

 

 





 



 

 







 

 



 

 

 

 





 

 









































 

 

 

 



	Originale	Sostituto
	Power Receiver	 Power
	Tuner	 Shift + 6
	CD	 Shift + 3
	VCR	 Shift + 4
	TV	 Shift + 1
	Tape Monitor	 Shift + 5
	Disc	 OK
	Direct Tuning	 Smart / List
	1 Tuner	 1
	2 Tuner	 2
	3 Tuner	 3
	4 Tuner	 4
	5 Tuner	 5
	6 Tuner	 6
	7 Tuner	 7
	8 Tuner	 8
	9 Tuner	 9

	Originale	Sostituto
	0 Tuner	 0
	≥10 / -/- Tuner	 Guide / EPG / -/-
	Muting	 Mute / Dimmer
	Volume -	 Vol-
	Volume +	 Vol+





	Originale	Sostituto
	Power Receiver	 Power
	Tuner	 Shift + 6
	CD	 Shift + 3
	VCR	 Shift + 4
	TV	 Shift + 1
	Tape Monitor	 Shift + 5
	Disc	 OK
	Direct Tuning	 Smart / List
	1 CD	 1
	2 CD	 2
	3 CD	 3
	4 CD	 4
	5 CD	 5
	6 CD	 6
	7 CD	 7
	8 CD	 8
	9 CD	 9

	Originale	Sostituto
	0 CD	 0
	≥10 / - / - CD	 Guide / EPG / - / -
	Fast Reverse CD	 << / Tune-
	Fast Forward CD	 >> / Preset+
	Stop CD	 Stop / Hold
	Play CD	 Play / Slow
	Muting	 Mute / Dimmer
	Volume -	 Vol-
	Volume +	 Vol+

