
















 








 
















Originale	Sostituto
	 Power
	 CD 3
	 Tuner 6
	 Tape 5
	 AUX 7
	 +  Shift + Sleep / Timer
	 Sleep / Timer
	 Vol-
	 Vol+
	 I<< / Preset-
	 >>I / Preset+
	 Stop / Hold
	 Play / Slow
	 Pause / Step / Freeze
	 << / Tune-
	 >> / Tune+
	 Smart / List

Originale	Sostituto
	 Display / Media
	 Mute / Dimmer





Originale	Sostituto
	 Power
	 3
	 6
	 5
	 7
	 Picture / Format
	 Shift + Sleep / Timer
	 Sleep / Timer
	 Vol-
	 Vol+
	 I<< / Preset-
	 >>I / Preset+
	 Stop / Hold
	 Play / Slow
	 Pause / Step / Freeze
	 << / Tune-
	 >> / Tune+

Originale	Sostituto
	 Smart / List
	 Display / Media
	 Mute / Dimmer
	 CH- / Page-
	 CH+ / Page+



