



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		Guide		Guide / EPG / -/-
	3		3		Up		Up
	4		4		i		Info / Angle
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	Lang		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	0		0		Netflix		Shift + Red / Netflix /
	TXT		Text / Goto		YouTube		Shift + Yellow / YouTube /
	Vol+		Vol+		FPay		Shift + Green / APP /
	Mute		Mute / Dimmer		prime video		Shift + Blue / Prime
	P+		CH+ / Page+		Red		Red / Netflix / Search





Originale	Sostituto
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<<	<< / Tune-
Pause	Pause / Step / Freeze
>>	>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
Stop	Stop / Hold

Originale	Sostituto

