



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Sleep	 0
 0 / Sleep	 Sleep / Timer
 TV/Rad	 TV/Radio /
 TV / SAT	 AV / Input / RDS
 CH+	 CH+ / Page+
 CH-	 CH- / Page-

Originale	Sostituto
 Vol+	 Vol+
 Vol-	 Vol-
 Menu	 Menu / Home
 Recall	 Back / Return
 P+	 Shift + CH+ /
 P-	 Shift + CH- /
 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Fav	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Red / V-FMT	 Red / Netflix / Search
 Red / V-FMT	 Picture / Format





Originale	Sostituto	Originale	Sostituto
	Green Green / APP / Repeat		II> Shift + Right
	Yellow Yellow / YouTube / Repeat		Movie Smart / List
	Blue / Timer Blue / Prime Video / Random		USB Shift + 8
	Blue / Timer Shift + Sleep / Timer		USB Display / Media
	Info Info / Angle		
	Subt Subtitle / EQ		
	Audio Audio / Lang I/II		
	Find Shift + Red / Netflix /		
	Rec Rec / Rec Mode		
	Stop Stop / Hold		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	<< << / Tune-		
	>> >> / Tune+		
	I<< I<< / Preset-		
	>>I >>I / Preset+		
	<II Shift + Left		

