







 







Originale	Sostituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV/Audio	 TV/Radio /
 Blu-ray	 Shift + 1
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + 5
 AUX2	 AV / Input / RDS
 Phono	 Audio / Lang I/II
 iPod/USB	 Guide / EPG / -/--
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Sound / Title
 Internet/Radio	 Shift + TV/Radio / Program
 CH+	 CH+ / Page+

Originale	Sostituto
 Vol+	 Vol+
 CH-	 CH- / Page-
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Info	 Info / Angle
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze







Originale	Sostituto
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Smart Select 1	 Shift + Red / Netflix /
 Smart Select 2	 Shift + Green / APP /
 Smart Select 3	 Shift + Yellow / YouTube /
 Smart Select 4	 Shift + Blue / Prime
 Green	 Green / APP / Repeat
 Red	 Red / Netflix / Search
 Blue	 Blue / Prime Video / Random
 Yellow	 Yellow / YouTube / Repeat
 1	 1
 2	 2
 3	 3
 4	 4

Originale	Sostituto
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale	Sostituto
 Power	 Power
 CBL/SAT	 Setup / OPT /
 DVD	 Shift + 2
 TV/Audio	 TV/Radio /
 Blu-ray	 AV / Input / RDS
 AUX1	 Picture / Format
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Setup / OPT / Tools
 AUX2	 Subtitle / EQ
 Phono	 Audio / Lang I/II
 iPod/USB	 Guide / EPG / -/--
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Shift + Fav / Marker / PC
 Internet/Radio	 Shift + TV/Radio / Program
 CH+	 CH+ / Page+

Originale	Sostituto
 Vol+	 Vol+
 CH-	 CH- / Page-
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 Fav / Marker / PC
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 >>/Tune+	 >>I / Preset+





Originale		Sostituto		Originale		Sostituto	
	<<		<< / Tune-				
	>>		>> / Tune+				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Enter		OK				

