



Originale	Sostituto
On	Power
Off	+  Shift + Power
Mute	Mute / Dimmer
AVR	Fav / Marker / PC
DVD	+  Shift + 2
CD	+  Shift + 3
Tape	+  Shift + 5
VID1/VCR	Guide / EPG / -/--
VID2/TV	+  Shift + 1
VID3/CBL/SAT	+  Shift + 0
VID4	+  Shift + Guide / EPG / -/--
AM/FM	+  Shift + 6
6/8 CH	Picture / Format
Sleep	Sleep / Timer
Test	Text / Goto
Vol+	Vol+
Surr.	Eject / Surround

Originale	Sostituto
Night	Info / Angle
M-Room	Zoom / Size
Vol-	Vol-
CH./[≡?]	Yellow / YouTube / Repeat
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	D.Menu / Top
Right	Right
Digital/[≡X]	Red / Netflix / Search
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2
3	3
4	4
5	5





Originale	Sostituto	Originale	Sostituto
6	6	DTS Neo 6	Subtitle / EQ
7	7	Logic 7	Blue / Prime Video / Random
8	8	Stereo	Audio / Lang I/II
Tun-M/[≡+]	Green / APP / Repeat	I<</Skip Down	Shift + I<< / Preset-
9	9	Skip Up/>>I	Shift + >>I / Preset+
0	0	<< DVD	Shift + << /
Mem/[≡◆]	Rec / Rec Mode	Play DVD	Play / Slow
Tuning ▲	>> / Tune+	>> DVD	Shift + >> /
Direct	TV/Radio /	Stop DVD	Stop / Hold
Clear	Exit / Cancel / Clear	Pause DVD	Pause / Step / Freeze
Preset ▲	>>I / Preset+		
Tuning ▼	<< / Tune-		
OSD	Display / Media		
RDS	AV / Input / RDS		
Preset ▼	I<< / Preset-		
Dolby	Sound / Title		
DTS Surr.	Smart / List		

Originale	Sostituto	Originale	Sostituto
DTS Neo 6	Subtitle / EQ	DTS Neo 6	Subtitle / EQ
Logic 7	Blue / Prime Video / Random	Logic 7	Blue / Prime Video / Random
Stereo	Audio / Lang I/II	Stereo	Audio / Lang I/II
I<</Skip Down	Shift + I<< / Preset-	I<</Skip Down	Shift + I<< / Preset-
Skip Up/>>I	Shift + >>I / Preset+	Skip Up/>>I	Shift + >>I / Preset+
<< DVD	Shift + << /	<< DVD	Shift + << /
Play DVD	Play / Slow	Play DVD	Play / Slow
>> DVD	Shift + >> /	>> DVD	Shift + >> /
Stop DVD	Stop / Hold	Stop DVD	Stop / Hold
Pause DVD	Pause / Step / Freeze	Pause DVD	Pause / Step / Freeze





Originale	Sostituto
Power On	Power
Power Off	Shift + Power
Vol+	Vol+
Night	Info / Angle
M-Room	Zoom / Size
Vol-	Vol-
CH./[≡?]	Yellow / YouTube / Repeat
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	D.Menu / Top
Right	Right
Digital/[≡X]	Red / Netflix / Search
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2

Originale	Sostituto
3	3
4	4
5	5
6	6
7	7
8	8
Tun-M/[≡+]	Green / APP / Repeat
9	9
0	0
Mem/[≡◇]	Rec / Rec Mode
Direct	TV/Radio /
Clear	Exit / Cancel / Clear
Preset ▲	Shift + >>I / Preset+
RDS/D.Skip	AV / Input / RDS
Preset ▼	Shift + I<< / Preset-
I<<	I<< / Preset-
>>I	>>I / Preset+







Originale	Sostituto
 Power On	 Power
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Mem/[≡ ♦]	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Direct	 TV/Radio /
 Delay/Normal	 Setup / OPT /
 RDS/D.Skip	 AV / Input / RDS
 SPKR/Menu	 Menu / Home
 Power (On/Off)	 OK
 Clear VCR	 Exit / Cancel / Clear
 Vol+ VCR	 Vol+
 PR+ VCR	 CH+ / Page+

Originale	Sostituto
 Vol- VCR	 Vol-
 PR- VCR	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tun-M/[≡ +]	 Green / APP / Repeat
 Preset ▲/Blue	 Blue / Prime Video / Random
 Power Off	 Shift + Power
 Play VCR	 Shift + Play /
 Stop VCR	 Shift + Stop /

Hold





