






 






























Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <</ <<	 << / Tune-
 >>/>>	 >> / Tune+
 AD/Subt.	 Audio / Lang I/II
 TTX/MIX	 Text / Goto
 Samsung TV	 TV/Radio /
 Settings	 Setup / OPT /
 Source	 AV / Input / RDS
 Home	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK

Originale	Sostituto
 Right	 Right
 Exit	 Exit / Cancel / Clear
 PRE-CH	 Fav / Marker / PC
 Down	 Down
 Vol+	 Vol+
 CH List	 Smart / List
 Ch+	 CH+ / Page+
 Vol-	 Vol-
 Ch-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Originale		Sostituto	
9	9	9	9
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - BAT 0	0
A	Red	NETFLIX SEARCH	Red / Netflix / Search
B	Green	APP REPEAT	Green / APP / Repeat
C	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
D	Blue	Prime Video RANDOM	Blue / Prime Video / Random
RETURN	Return	RETURN BACK	Back / Return
NETFLIX	Netflix	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
video	video prime	SHIFT + Prime Video RANDOM	Shift + Blue / Prime

Originale	Sostituto

