





































Originale	Sostituto
 Function	 Power
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Channel Up	 CH+ / Page+
 Channel Down	 CH- / Page-
 Slow	 Shift + Play /
 Menu	 Menu / Home
 Display	 Display / Media

Originale	Sostituto
 Tape Counter	 Setup / OPT /
 Tape Counter	 TV/Radio /
 REW	 << / Tune-
 Left	 Left
 Play	 Play / Slow
 Up	 Up
 Right	 Right
 F.FWD	 >> / Tune+
 Down	 Down
 Stop	 Stop / Hold
 Record	 Rec / Rec Mode
 Speed	 Smart / List
 Pause/Still	 Pause / Step / Freeze
 Quick-Find	 Red / Netflix / Search
 Time Search	 Green / APP / Repeat
 Index Search	 Yellow / YouTube / Repeat

