
















































Originale		Sostituto		Originale		Sostituto	
	Function		Power		Tape Counter		Setup / OPT /
	Eject		Eject / Surround		Tape Counter		TV/Radio /
	1		1		REW		<< / Tune-
	2		2		Left		Left
	3		3		Play		Play / Slow
	4		4		Up		Up
	5		5		Right		Right
	6		6		F.FWD		>> / Tune+
	7		7		Down		Down
	8		8		Stop		Stop / Hold
	9		9		Record		Rec / Rec Mode
	0		0		Speed		Smart / List
	Channel Up		CH+ / Page+		Pause/Still		Pause / Step / Freeze
	Channel Down		CH- / Page-		Quick-Find		Red / Netflix / Search
	Slow		Shift + Play /		Time Search		Green / APP / Repeat
	Menu		Menu / Home		Index Search		Yellow / YouTube / Repeat
	Display		Display / Media				

