



Originale	Sostituto
Power	Power
Source (Games)	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Originale	Sostituto
Vol-	Vol-
World/Internet	Smart / List
PR-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Movie-Music-Phot	Display / Media
Guide	Guide / EPG / -/-
*/o	Picture / Format
*/o..	Setup / OPT /





	Originale	Sostituto	Originale	Sostituto
	 [=]/Text	 GOTO TEXT Text / Goto		
	 Red	 NETFLIX SEARCH Red / Netflix / Search		
	 Green	 APP REPEAT Green / APP / Repeat		
	 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
	 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
	 LANG. Lang	 LANG I/II AUDIO Audio / Lang I/II		
	 [=]..	 EQ SUBTITLE Subtitle / EQ		
	 [-o-]	 SIZE ZOOM Zoom / Size		
	 <<	 TUNE- << / Tune-		
	 Pause	 STEP-FREEZE Pause / Step / Freeze		
	 >>	 TUNE+ >> / Tune+		
	 Rec	 REC MODE Rec / Rec Mode		
	 Play	 SLOW Play / Slow		
	 Stop	 HOLD Stop / Hold		

