



Originale	Sostituto
Power	Power
Source (Games)	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Originale	Sostituto
Vol-	Vol-
World/Internet	Smart / List
PR-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Movie-Music-Phot	Display / Media
Guide	Guide / EPG / -/-
*/o	Picture / Format
*/o..	Setup / OPT /





	Originale	Sostituto	Originale	Sostituto
	[≡]/Text	 Text / Goto		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Lang	 Audio / Lang I/II		
	[≡]..	 Subtitle / EQ		
	[-o-]	 Zoom / Size		
	<<	 << / Tune-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Stop	 Stop / Hold		

