 



 







 

 

 





 

 





 

 





Originale	Sostituto
 Power	 Power
 Standby	 Shift + Power
 CD	 Shift + 3
 MD/CD-R	 Shift + 5
 DVD	 Shift + 2
 DTV/CBL	 Shift + 1
 Tuner	 Shift + 6
 Multi CH In	 Shift + 8
 V-AUX	 Shift + 7
 DVR	 Shift + 9
 VCR	 Shift + 4
 PHONO	 Shift + 0
 Sleep	 Sleep / Timer
 Volume +	 Vol+
 Volume -	 Vol-
 Mute	 Mute / Dimmer
 Stereo	 1

Originale	Sostituto
 Music	 2
 Entertain	 3
 Movie	 4
 Standard	 5
 Select	 6
 Exto Sur.	 7
 Pure Direct	 8
 Speakers	 9
 Enhancer	 0
 Night	 Guide / EPG / -/-
 Straight	 Fav / Marker / PC
 Level / Title	 Sound / Title
 Set Menu	 Menu / Home
 Up	 Up
 Left/-	 Left
 Enter	 OK
 Right/+	 Right





Originale		Sostituto		Originale		Sostituto	
	Down		Down				
	Return		Back / Return				
	On Screen /		Display / Media				







 

 

 



 

 

 

Originale	Sostituto
Power	Power
Standby	+ Shift + Power
CD	+ Shift + 3
MD/CD-R	+ Shift + 5
DVD	+ Shift + 2
DTV/CBL	+ Shift + 1
Tuner	+ Shift + 6
Multi CH In	+ Shift + 8
V-AUX	+ Shift + 7
DVR	+ Shift + 9
VCR	+ Shift + 4
PHONO	+ Shift + 0
Sleep	Sleep / Timer
Volume +	Vol+
Volume -	Vol-
Mute	Mute / Dimmer
1	1

Originale	Sostituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
ENT	Fav / Marker / PC
Title/Level	Sound / Title
Up / Preset+	Up
Up / Preset+	>> / Preset+
Menu/Set Menu	Menu / Home
Left / A/B/C/D/E-	Left
Enter	OK
Right /	Right



A/B/C/D/E+



Originale		Sostituto		Originale		Sostituto	
	Return		Back / Return				
	Down / Preset-		Down				
	Down / Preset-		I<< / Preset-				
	Display		Display / Media				
	Freq/Text		Red / Netflix / Search				
	PTY Seek Mode		Yellow / YouTube / Repeat				
	PTY Seek Start		Blue / Prime Video / Random				
	EON		Green / APP / Repeat				

