







 





Originale	Sostituto
 Standby	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Originale	Sostituto
 Tv/Radio	 TV/Radio /
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 EPG	 Guide / EPG / -/--
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Media	 Display / Media
 CH-	 CH- / Page-
 Rec	 Rec / Rec Mode





Originale	Sostituto
T-Shift	D.Menu / Top
I/II/Audio	Audio / Lang I/II
Size/Aspect	+ Shift + Zoom /
Text	Text / Goto
Reveal	Setup / OPT /
Hold	+ Shift + Stop /
Subpage	Eject / Surround
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Index/R.List	Zoom / Size
Subtitle	Subtitle / EQ
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I/Mix	>>I / Preset+
Red	Red / Netflix / Search

Originale	Sostituto
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

