 









 
















 
























 



 





 














Originale	Sostituto	Originale	Sostituto
Red	 Red / Netflix / Search	1. ?	 1
TV	 AV / Input / RDS	Green	 Green / APP / Repeat
Sys/Serv	 D.Menu / Top	Yellow	 Yellow / YouTube / Repeat
Browse	 Smart / List	Blue	 Blue / Prime Video / Random
Lang./Rewind	 << / Tune-	Freeze	 Pause / Step / Freeze
Epg	 +  Shift + Guide / EPG / -/-	Radio	 TV/Radio /
2abc	 2	East	 Rec / Rec Mode
3def	 3	H/V Play	 Play / Slow
4ghi	 4	LNB F.Forward	 >> / Tune+
5jkl	 5	Menu Up	 Up
6mno	 6	Mute	 Mute / Dimmer
7pqrm	 7	Opt?	 Setup / OPT /
8tuv	 8	App	 +  Shift + Green / APP /
9wxyz	 9	Info	 Info / Angle
Guide Pilote	 Guide / EPG / -/-	Subt.List	 Subtitle / EQ
0/10	 0	Sleep Timer	 Sleep / Timer
FAV Pref.	 Fav / Marker / PC	Text	 Text / Goto





Originale	Sostituto	Originale	Sostituto
Zoom	 Zoom / Size		
Menu	 Menu / Home		
PWR On/Off	 Power		
Display	 Display / Media		
Menu Left	 Left		
Menu Right	 Right		
Exit	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
CH/Page+	 CH+ / Page+		
Volume-	 Vol-		
Audio	 Audio / Lang I/II		
CH/Page-	 CH- / Page-		



Originale	Sostituto	Originale	Sostituto
TV	 TV/Radio /	Blue	 Blue / Prime Video / Random
Interat	 Info / Angle	Search	 Shift + Red / Netflix /
Store	 Menu / Home	H/V Play	 Play / Slow
Home Cinema	 Smart / List	Menu Down	 Down
TV/SAT	 AV / Input / RDS	Video	 Shift + 4
Red	 Red / Netflix / Search	Menu Up	 Up
5jkl	 5	Display	 Display / Media
6mno	 6	Menu Left	 Left
7pqrm	 7	Menu Right	 Right
8tuv	 8	Exit	 Exit / Cancel / Clear
9wxyz	 9	PWR On/Off	 Power
Guide Pilote	 Guide / EPG / -/--	Volume+	 Vol+
0/10	 0	CH/Page+	 CH+ / Page+
FAV Pref.	 Fav / Marker / PC	Volume-	 Vol-
4ghi	 4	Audio	 Audio / Lang I/II
Green	 Green / APP / Repeat	CH/Page-	 CH- / Page-
Yellow	 Yellow / YouTube / Repeat	1. ?	 1



Originale	Sostituto	Originale	Sostituto
2abc	 2		
3def	 3		

