



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Progressive		TV/Radio /
	Dimmer		Mute / Dimmer		DVD Menu		D.Menu / Top
	Play		Play / Slow		Rec Menu		Setup / OPT /
	Pause		Pause / Step / Freeze		CHP Divide		Text / Goto
	Stop		Stop / Hold		Input Select		AV / Input / RDS
	Rec		Rec / Rec Mode		Content Menu		Menu / Home
	<< Picture		<< / Tune-		Up		Up
	Picture Search		>> / Tune+		DVD Angle		Info / Angle
	I<< Skip		I<< / Preset-		Left		Left
	Skip >>I		>>I / Preset+		Enter		OK
	FL Select		Sound / Title		Right		Right
	DVD Audio		Audio / Lang I/II		Clear		Exit / Cancel / Clear
	DVD Subtitle		Subtitle / EQ		Down		Down
	Open / Close		Eject / Surround		DVD Return		Back / Return
	P in P		Picture / Format		Instant Skip		Vol+
	Zoom		Zoom / Size		Easy Navi		Smart / List
	Timesleep		Sleep / Timer		Channel+		CH+ / Page+





Originale	Sostituto
Instant Replay	Vol-
Library	Display / Media
Channel-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/--
0	0
Remain	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat

Originale	Sostituto
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec Mode	Shift + Rec / Rec Mode
<I Slow	Shift + << /
Slow I>	Shift + >> /
II< Frame/Adjust	Shift + I<< / Preset-
Frame/Adjust >II	Shift + >>I / Preset+
Time Bar	Shift + Sleep / Timer
Top Menu	Shift + D.Menu / Top Menu
Setup	Shift + Setup / OPT / Tools
Edit Menu	Shift + Menu /
Delete	Shift + Exit / Cancel / Clear
Display	Shift + Display / Media
DVD	Shift + 2
HDD	Shift + 7
T.Search	Shift + Red / Netflix /

