



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+
Rec	Rec / Rec Mode
USB	Shift + 8
I<<	I<< / Preset-
>>I	>>I / Preset+
Help	Smart / List
FAV	Shift + Fav / Marker / PC
Audio	Audio / Lang I/II
Option	Setup / OPT /
Red	Red / Netflix / Search
TTX	Text / Goto

Originale	Sostituto
Green	Green / APP / Repeat
Sub	Subtitle / EQ
Yellow	Yellow / YouTube / Repeat
Sleep	Sleep / Timer
Blue	Blue / Prime Video / Random
Timer	Shift + Sleep / Timer
Menu	Menu / Home
i	Info / Angle
Up	Up
Left	Left
OK	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Back	Back / Return
Vol+	Vol+
EPG	Guide / EPG / -/-





Originale		Sostituto	
	CH+		CH+ / Page+
	Vol-		Vol-
	List		Shift + Smart / List
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv/Radio		TV/Radio /
	0		0
	Recall		Fav / Marker / PC

Originale		Sostituto	

