


 



 



 





 

 




 





 





 

 





 

















 















 












 
 











Originale	Sostituto
 Power	 Power
 DVD	 Shift + 2
 Tuner Band	 Shift + 6
 Aux	 Shift + 7
 Open / Close	 Eject / Surround
 Title	 Shift + Sound / Title
 Menu	 Menu / Home
 TV / Video	 AV / Input / RDS
 TV Power	 Shift + Power
 Audio Mo/St	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 TV Channel -	 Shift + CH- /
 TV Channel +	 Shift + CH+ /
 Display	 Display / Media
 Return	 Back / Return
 TV Volume -	 Shift + Vol-
 TV Volume +	 Shift + Vol+



Originale	Sostituto
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 << / Tuning	 << / Tune-
 >> / Tuning Up	 >> / Tune+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Volume -	 Vol-
 Volume +	 Vol+
 DSP/PLII Mode	 CH+ / Page+
 DSP/PLII Efect	 CH- / Page-
 Mute	 Mute / Dimmer





Originale	Sostituto
 Sleep	 Sleep / Timer
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 Sound Edit	 Sound / Title
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 SPK Mode	 Smart / List
 7	 7
 8	 8
 9	 9
 Pro Logic II	 Shift + Audio / Lang I/II
 Slow	 Shift + Play /
 0	 0
 Setup	 Setup / OPT /
 Test Tone	 Shift + Text / Goto

Goto

Originale	Sostituto
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 DRC	 D.Menu / Top
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Program	 TV/Radio /
 Step	 Shift + Pause / Step /
 Go To	 Text / Goto
 Remain	 Picture / Format

