



Originale	Sostituto
Power	Power
DVD	Shift + 2
Tuner Band	Shift + 6
Aux	Shift + 7
Open / Close	Eject / Surround
Title	Shift + Sound / Title
Menu	Menu / Home
TV / Video	AV / Input / RDS
TV Power	Shift + Power
Audio Mo/St	Audio / Lang I/II
Subtitle	Subtitle / EQ
TV Channel -	Shift + CH- /
TV Channel +	Shift + CH+ /
Display	Display / Media
Return	Back / Return
TV Volume -	Shift + Vol-
TV Volume +	Shift + Vol+

Originale	Sostituto
I<<	I<< / Preset-
Stop	Stop / Hold
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
>>I	>>I / Preset+
<< / Tuning	<< / Tune-
>> / Tuning Up	>> / Tune+
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Volume -	Vol-
Volume +	Vol+
DSP/PLII Mode	CH+ / Page+
DSP/PLII Efect	CH- / Page-
Mute	Mute / Dimmer



