











































 


 



Originale	Sostituto	Originale	Sostituto
POWER	 Power	DIGEST	 Text / Goto
MUTE	 Mute / Dimmer	KEYLOCK	 AV / Input / RDS
PLAY	 Play / Slow	TITLE MENU	 Menu / Home
PAUSE/STEP	 Pause / Step / Freeze	UP	 Up
STOP	 Stop / Hold	ANGLE	 Info / Angle
REV	 << / Tune-	LEFT	 Left
FWD	 >> / Tune+	ENTER	 OK
I<< SKIP	 I<< / Preset-	RIGHT	 Right
SKIP >>I	 >>I / Preset+	CLEAR	 Exit / Cancel / Clear
AUDIO MODE	 Sound / Title	DOWN	 Down
AUDIO MENU	 Audio / Lang I/II	RETURN	 Back / Return
SUBTITLE MENU	 Subtitle / EQ	PBC	 Smart / List
OPEN/CLOUSE	 Eject / Surround	SLOW/F	 CH+ / Page+
ZOOM	 Zoom / Size	DISPLAY	 Display / Media
PROGRAM	 TV/Radio /	SLOW/R	 CH- / Page-
DVD MENU	 D.Menu / Top	1	 1
SETUP	 Setup / OPT /	2	 2



Originale	Sostituto	Originale	Sostituto
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
BOOKMARK	 Fav / Marker / PC		
SEARCH	 Red / Netflix / Search		
REPEAT	 Green / APP / Repeat		
A--B	 Yellow / YouTube / Repeat		
RANDOM	 Blue / Prime Video / Random		
3 D	 +  Shift + 3		

