















































 


 
 














Originale	Sostituto	Originale	Sostituto
On/Off	 Power	On/Tim	 Setup / OPT /
Mute	 Mute / Dimmer	Text	 Text / Goto
Still	 Pause / Step / Freeze	TV/AV	 AV / Input / RDS
Txt Stop	 Stop / Hold	Menu	 Menu / Home
Tune-	 << / Tune-	Menu Up	 Up
Tune+	 >> / Tune+	Info	 Info / Angle
Contrast-	 I<< / Preset-	Menu Left	 Left
Contrast+	 >>I / Preset+	OK Enter	 OK
Color- S.Std	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Surround	 Eject / Surround	Swap	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	View	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Menu video	 D.Menu / Top	Display	 Display / Media



Originale	Sostituto	
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random

Originale	Sostituto	
Tone-	 + 	Shift + << /
Tone+	 + 	Shift + >> /
Bright- Sys	 + 	Shift + I<< / Preset-
Bright+ Mode	 + 	Shift + >>I / Preset+
Nicam/Mono	 + 	Shift + Audio / Lang I/II
4.# 16:9	 + 	Shift + Picture / Format
Aft/Caf	 + 	Shift + TV/Radio / Program
Off/Tim	 + 	Shift + Setup / OPT / Tools
Mix Scan	 + 	Shift + Text /
Game Coo	 + 	Shift + AV / Input / RDS
Store Text	 + 	Shift + Menu /
Browse	 + 	Shift + Info / Angle
Level L	 + 	Shift + Left
On Pip	 + 	Shift + OK
Level R/Woofers	 + 	Shift + Right
Back	 + 	Shift + Back / Return
Audio+	 + 	Shift + Vol+



