












































 
 


 








Originale	Sostituto	Originale	Sostituto
On/Off	 Power	TV/AV	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
Update	 Play / Slow	Menu Up	 Up
Reveal	 Pause / Step / Freeze	Info	 Info / Angle
Txt Stop	 Stop / Hold	Menu Left	 Left
Tone-	 << / Tune-	OK Enter	 OK
Tone+	 >> / Tune+	Menu Right	 Right
Contrast-	 I<< / Preset-	Menu Off	 Exit / Cancel / Clear
Contrast+	 >>I / Preset+	Menu Down	 Down
Menu audio	 Audio / Lang I/II	Back	 Back / Return
Subt.List	 Subtitle / EQ	Volume+	 Vol+
Surround	 Eject / Surround	Chan.Up	 CH+ / Page+
Txt Expand	 Zoom / Size	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Display	 Display / Media
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top	1	 1
Text	 Text / Goto	2	 2



Originale	Sostituto	Originale	Sostituto
3	 3	Audio-	 +  Shift + Vol-
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Nicam/Mono	 +  Shift + Audio / Lang I/II		
Level L	 +  Shift + Left		
Level R/Woofer	 +  Shift + Right		

