







 



 

 





 

 



 



 

 





 

 



 













Originale	Sostituto
 Power	 Power
 Displ	 Display / Media
 [...]	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Search	 Red / Netflix / Search
 [/]	 Guide / EPG / -/--
 1	 1
 2	 2
 3	 3
 Angle	 Shift + Info / Angle
 →	 Shift + Right
 4	 4
 5	 5
 6	 6
 I/P	 Zoom / Size
 Repeat	 Back / Return
 7	 7

Originale	Sostituto
 8	 8
 9	 9
 DV	 Text / Goto
 A-B	 Yellow / YouTube / Repeat
 CL	 Exit / Cancel / Clear
 0 / AV	 0
 RND	 Blue / Prime Video / Random
 Prog	 TV/Radio /
 I>	 Shift + Play /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 I<	 I<< / Preset-
 >I	 >>I / Preset+
<< button" data-bbox="510 841 540 871"/> <<	 << / Tune-
 >>	 >> / Tune+
 i	 Info / Angle





Originale	Sostituto
 Up	 Up
 [←] Enter	 Fav / Marker / PC
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Top Menu	 D.Menu / Top
 P+	 CH+ / Page+
 Setup	 Setup / OPT /
 Timer	 Sleep / Timer
 Vol+	 Vol+
 P-	 CH- / Page-
 Disc Op	 Smart / List
 Edit	 Sound / Title
 Vol-	 Vol-
 Rec	 Rec / Rec Mode

Originale	Sostituto
 Q-Set	 Picture / Format
 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer

