



























 

















Originale	Sostituto
 Eject	 Eject / Surround
 Power	 Power
 Copy	 TV/Radio /
 Info	 Info / Angle
 Power Mode	 Sleep / Timer
 Net Test	 Smart / List
 Net Cast	 Display / Media
 Slow	 Shift + Play /
 <<<	 <<< / Tune-
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Setup	 Setup / OPT /
 Home	 Shift + Menu / Home

Home

Originale	Sostituto
 Repeat	 Shift + Green / APP /
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Page+	 CH+ / Page+
 Vol-	 Vol-
 Page-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Originale	Sostituto
Search	+  Shift + Red / Netflix /
Zoom	ZOOM Zoom / Size
Rotate	TEXT Text / Goto
BGM	D.MENU D.Menu / Top
Sub.	SUBTITLE Subtitle / EQ
Audio	AUDIO Audio / Lang I/II

Originale	Sostituto

