





 



 
 










| Originale | Sostituto |
|----------------|--|
| Theatre |  Fav / Marker / PC |
| One-Touch Play |  +  Shift + Play / |
| Power |  Power |
| Sleep |  Sleep / Timer |
| Night |  Text / Goto |
| Dynamic Bass |  Eject / Surround |
| TV |  +  Shift + 1 |
| TV |  TV/Radio / |
| 1 |  1 |
| 2 |  2 |
| 3 |  3 |
| 4 |  4 |
| 5 |  5 |
| 6 |  6 |
| 7 |  7 |
| 8 |  8 |
| 9 |  9 |

| Originale | Sostituto |
|----------------------|---|
| Clear |  Exit / Cancel / Clear |
| 0 |  0 |
| Time |  +  Shift + Sleep / Timer |
| Audio |  Audio / Lang I/II |
| Subtitles / D.Tuning |  Subtitle / EQ |
| Angle |  +  Shift + Info / Angle |
| System Menu |  +  Shift + Menu / |
| Red |  Red / Netflix / Search |
| Green |  Green / APP / Repeat |
| Yellow |  Yellow / YouTube / Repeat |
| Blue |  Blue / Prime Video / Random |
| Top Menu |  D.Menu / Top |
| Display |  Display / Media |
| Pop Up / Menu |  Menu / Home |
| Up |  Up |
| Left |  Left |
| Enter |  OK |





| Originale | Sostituto | Originale | Sostituto |
|-------------|----------------------------|-----------|------------------|
| Power | Power | Tools | Setup / OPT / |
| 1 | 1 | Muting | Mute / Dimmer |
| 2 | 2 | Volume+ | Vol+ |
| 3 | 3 | Prog+ | CH+ / Page+ |
| 4 | 4 | Source | AV / Input / RDS |
| 5 | 5 | Volume- | Vol- |
| 6 | 6 | Prog- | CH- / Page- |
| 7 | 7 | [i+] | Info / Angle |
| 8 | 8 | | |
| 9 | 9 | | |
| Text | Text / Goto | | |
| 0 | 0 | | |
| -/-- | Shift + Guide / EPG / -/-- | | |
| Digital | Smart / List | | |
| Analog | Display / Media | | |
| Guide | Guide / EPG / -/-- | | |
| Home / Menu | Menu / Home | | |

| Originale | Sostituto | Originale | Sostituto |
|-------------|----------------------------|-----------|------------------|
| Power | Power | Tools | Setup / OPT / |
| 1 | 1 | Muting | Mute / Dimmer |
| 2 | 2 | Volume+ | Vol+ |
| 3 | 3 | Prog+ | CH+ / Page+ |
| 4 | 4 | Source | AV / Input / RDS |
| 5 | 5 | Volume- | Vol- |
| 6 | 6 | Prog- | CH- / Page- |
| 7 | 7 | [i+] | Info / Angle |
| 8 | 8 | | |
| 9 | 9 | | |
| Text | Text / Goto | | |
| 0 | 0 | | |
| -/-- | Shift + Guide / EPG / -/-- | | |
| Digital | Smart / List | | |
| Analog | Display / Media | | |
| Guide | Guide / EPG / -/-- | | |
| Home / Menu | Menu / Home | | |

