







 

 

 

 



 

















Originale	Sostituto
 Auto Memory	 Green / APP / Repeat
 Memory	 Red / Netflix / Search
 Power Receiver	 Power
 PTY	 Info / Angle
 Display	 Display / Media
 Virtual	 Smart / List
 Active EQ	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 Bass Boost	 Eject / Surround
 4	 4
 5	 5
 6	 6
 Tone	 Text / Goto
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 Sound	 Sound / Title
 +10	 Guide / EPG / -/-
 0	 0
 HDMI Setup	 Menu / Home
 Setup	 Setup / OPT /
 Listen Mode	 Blue / Prime Video / Random
 Pure Audio	 Yellow / YouTube / Repeat
 Multi Control	 CH- / Page-
 Multi Control Up	 CH+ / Page+
 Volume+	 Vol+
 Volume-	 Vol-
 Band	 TV/Radio /
 Auto/Mono	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 P.Call-	 I<< / Preset-
 P.Call+	 >>I / Preset+



















 

 





 

 

 

 

 



 
 
Originale		Sostituto	
	Tuning-		<< / Tune-
	Tuning+		>> / Tune+
	HDMI 1		Shift + 8
	HDMI2		Shift + 9
	HDMI 3		Shift + Guide / EPG / -/-
	HDMI 4		Shift + 0
	DVD		Shift + 2
	Video		Shift + 4
	CD		Shift + 3
	AUX		Shift + 7
	TV		Shift + 1
	AV AUX		Shift + 5
	Tuner		Shift + 6
	Dimmer		Shift + Mute / Dimmer

Originale	Sostituto





Originale	Sostituto
 Power DVD	 Power
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up

Originale	Sostituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 On Screen	 Display / Media
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

