



Originale	Sostituto
Power	Power
Power Tv	Shift + Power
CH+ Tv	Shift + CH+ /
Volume+ Tv	Vol+
Direct Tv Rec	Shift + TV/Radio / Program
AV Tv	Shift + AV / Input / RDS
CH- Tv	Shift + CH- /
Volume- Tv	Vol-
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7

Originale	Sostituto
8	8
9	9
ShowView	Zoom / Size
Cancel	Exit / Cancel / Clear
0	0
Input Select	AV / Input / RDS
Manual Skip	Shift + Display / Media
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Direct Navigator/Top	D.Menu / Top
Up	Up
Functions	Setup / OPT /





Originale	Sostituto
	Left
	Enter
	Right
	Sub Menu
	Down
	Return
	Prog/Check
	Display
	Status
	Time Slip
	Rec
	Rec Mode
	EXT Link
	Timer
	Audio
	Create Chapter
	Erase
	Left
	OK
	Right
	Menu / Home
	Down
	Back / Return
	TV/Radio /
	Display / Media
	Picture / Format
	Blue / Prime Video / Random
	Rec / Rec Mode
	Shift + Rec / Rec Mode
	Smart / List
	Sleep / Timer
	Audio / Lang I/II
	Green / APP / Repeat
	Red / Netflix / Search

Originale	Sostituto
	F Rec
	HDD
	DVD
	SD/PC
	B1
	II>/Frame
	Position
	Input Select 2
	Subtitle / EQ
	Shift + 5
	Shift + 6
	Shift + 7
	Shift + 1
	Shift + 2
	Shift + 3
	Shift + 4

