 



 







 

 

 

 

 



 

 


 
 





Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 Up	 Up
 Right	 Right
 Clear	 Exit / Cancel / Clear
 Left	 Left
 Down	 Down
 OK / Clk/Cnt	 OK
 i	 Info / Angle
 Pause/Still	 Pause / Step / Freeze
 FF	 >> / Tune+
 REW	 << / Tune-
 Play	 Play / Slow
 Stop	 Stop / Hold
 Rec ITR	 Rec / Rec Mode
 1	 1
 2	 2

Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV/VCR	 Smart / List
 0	 0
 CM Skip	 Fav / Marker / PC
 ShowView / Video Plus+	 Display / Media
 LP	 Menu / Home
 AV	 AV / Input / RDS
 C.Lock	 D.Menu / Top
 ez POWER OFF	 Red / Netflix / Search
 ez REPEAT	 Green / APP / Repeat

