



Originale	Sostituto
	Shift + Power
	Power
	Sleep / Timer
	Fav / Marker / PC
	6
	3
	Guide / EPG / -/--
	7
	0
	5
	8
	1
	4
	9
	2
	Vol+
	Vol-

Originale	Sostituto
	Mute / Dimmer
	Up
	Menu / Home
	Setup / OPT /
	Left
	OK
	Right
	Back / Return
	Down
	Display / Media
	TV/Radio /
	Sound / Title
	Audio / Lang I/II
	Zoom / Size
	Picture / Format
	Subtitle / EQ
	AV / Input / RDS





Originale		Sostituto		Originale	Sostituto
	Select		Text / Goto		
	Extd Sur.		Eject / Surround		
	Night		Smart / List		
	Freq/RDS		Play / Slow		
	EON		Pause / Step / Freeze		
	PTY Seek Mode		<< / Tune-		
	PTY Seek Start		>> / Tune+		







Originale	Sostituto
Power	Power
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Preset Up	Up
Preset Up	>>I / Preset+
Left A/B/C/D/E	Left
Enter	OK
Right A/B/C/D/E	Right
Preset Down	I<< / Preset-
Preset Down	Down
Display	Display / Media
1	1
2	2
3	3
4	4
5	5

Originale	Sostituto
6	6
7	7
8	8
9	9
0	0
ENT	Fav / Marker / PC
Freq/RDS	Play / Slow
Eon	Pause / Step / Freeze
Mode PTY Seek	<< / Tune-
PTY Seek Start	>> / Tune+

