 



 













 







 











Originale	Sostituto
 Input	 AV / Input / RDS
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 Vol+	 Vol+
 Home	 Menu / Home

Originale	Sostituto
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 [i+]	 Info / Angle
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
Prime Video	Shift + Blue / Prime Video / Random



