





Originale	Sostituto	Originale	Sostituto
 TV/RAD	 TV/Radio /	 Vol+	 Vol+
 Power	 Power	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 P+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Power Saving	 Eject / Surround	 P-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return / Exit	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 List	 Smart / List	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 Q.View	 Display / Media	 Text/[≡]	 Text / Goto

Originale	Sostituto	Originale	Sostituto
 TV/RAD	 TV/Radio /	 Vol+	 Vol+
 Power	 Power	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 P+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Power Saving	 Eject / Surround	 P-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return / Exit	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 List	 Smart / List	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 Q.View	 Display / Media	 Text/[≡]	 Text / Goto





Originale		Sostituto	
	T.OPT		Setup / OPT /
	Subtitle		Subtitle / EQ
	FAV		Fav / Marker / PC
	Q.Menu		D.Menu / Top
	Info		Info / Angle
	Guide		Guide / EPG / -/--

Originale		Sostituto	

