


 

 

 

 

 

 

 

 



 





Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 Vol+	 Vol+
 Function	 Menu / Home
 Preset/Folder+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Preset/Folder-	 CH- / Page-
 Program/Memor	 Display / Media
 Auto Dj	 Zoom / Size
 Delete	 Exit / Cancel / Clear
 Sound Effect	 Sound / Title
 I<<	 I<< / Preset-
 Tun-	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Tun+	 >> / Tune+

Originale	Sostituto
 >>	 >> / Preset+
 Stop	 Stop / Hold
 Info	 Info / Angle
 Repeat	 Green / APP / Repeat
 Sleep	 Sleep / Timer
 Clock	 Shift + Sleep / Timer
 Alarm	 OK
 RDS/SET	 Setup / OPT /
 USB REC	 Rec / Rec Mode
 EQ/Region	 Subtitle / EQ
 PTY	 Smart / List

