




Originale	Sostituto
Timer	D.Menu / Top
Timer	+  Shift + Sleep / Timer
Set	Menu / Home
Standby / Delete	+  Shift + Power
Standby / Delete	Exit / Cancel / Clear
Sleep	Sleep / Timer
Power	Power
FM	Smart / List
1	1
2	2
3	3
4	4
MW	CH+ / Page+
5	5
6	6
7	7
8	8

Originale	Sostituto
LW	CH- / Page-
9	9
10	Guide / EPG / -/--
11	0
12	Fav / Marker / PC
FM Mode	Red / Netflix / Search
Direct	Green / APP / Repeat
Function	Yellow / YouTube / Repeat
CD I<<<	I<<< / Preset-
CD >>I	>>I / Preset+
CD Stop	Stop / Hold
CD Pause	Pause / Step / Freeze
CD Play	Play / Slow
DECK <<<	Down
DECK Rev. Play	Left
DECK Play	Right
DECK >>>	Up





Originale	Sostituto
 DECK Stop	 OK
 PHONO Start / Cut	 Display / Media
 DECK Rec	 Info / Angle
 DECK Pause	 Back / Return
 DECK 1/2	 AV / Input / RDS
 Surround	 Eject / Surround
 BBE	 Sound / Title
 Muting	 Mute / Dimmer
 Volume-	 Vol-
 Volume+	 Vol+

Originale	Sostituto







Originale	Sostituto
Timer	D.Menu / Top
Timer	+  Shift + Sleep / Timer
Set	Menu / Home
Standby / Delete	Exit / Cancel / Clear
Standby / Delete	+  Shift + Power
Sleep	Sleep / Timer
Power	Power
FM	Smart / List
CD 1	1
CD 2	2
CD 3	3
CD 4	4
MW	CH+ / Page+
CD 5	5
CD 6	6
CD 7	7
CD 8	8

Originale	Sostituto
LW	CH- / Page-
CD 9	9
CD 0	0
CD +10	Guide / EPG / -/--
CD Program	TV/Radio /
FM Mode	Red / Netflix / Search
Direct	Green / APP / Repeat
Function	Yellow / YouTube / Repeat
CD I<<	I<< / Preset-
CD >>I	>>I / Preset+
CD Stop	Stop / Hold
CD Pause	Pause / Step / Freeze
CD Play	Play / Slow
DECK <<	Down
DECK Rev. Play	Left
DECK Play	Right
DECK >>	Up





Originale		Sostituto		Originale		Sostituto	
	DECK Stop		OK				
	PHONO Start / Cut		Display / Media				
	DECK Rec		Info / Angle				
	DECK Pause		Back / Return				
	DECK 1/2		AV / Input / RDS				
	Surround		Eject / Surround				
	BBE		Sound / Title				
	Muting		Mute / Dimmer				
	Volume-		Vol-				
	Volume+		Vol+				







Originale	Sostituto
Timer	D.Menu / Top
Timer	+  Shift + Sleep / Timer
Set	Menu / Home
Standby / Delete	Exit / Cancel / Clear
Standby / Delete	+  Shift + Power
Sleep	Sleep / Timer
Power	Power
FM	Smart / List
GEQ 40Hz	1
GEQ 125Hz	2
GEQ 330Hz	3
GEQ 1KHz	4
MW	CH+ / Page+
GEQ 2.5KHz	5
GEQ 6.3KHz	6
GEQ15KHz	7
GEQ	TV/Radio /

PRGM/Manual

Program

Originale	Sostituto
LW	CH- / Page-
GEQ Down	Down
GEQ Up	Up
GEQ Off/On	OK
GEQ PRGM	AV / Input / RDS
FM Mode	Red / Netflix / Search
Direct	Green / APP / Repeat
Function	Yellow / YouTube / Repeat
CD I<<	I<< / Preset-
CD >>I	>>I / Preset+
CD Stop	Stop / Hold
CD Pause	Pause / Step / Freeze
CD Play	Play / Slow
PHONO Start / Cut	Display / Media
Surround	Eject / Surround
BBE	Sound / Title
Muting	Mute / Dimmer





Originale

Sostituto

VOLUME	Volume-	VOL -	Vol-
VOLUME	Volume+	+ VOL	Vol+

Originale

Sostituto