























 







































Originale	Sostituto
 Energy/Saving	 Eject / Surround
 Power	 Power
 TV/Rad	 TV/Radio /
 Guide	 Guide / EPG / -/--
 Info	 Info / Angle
 Ratio	 Picture / Format
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List

Originale	Sostituto
 0	 0
 Q.View	 Display / Media
 Settings	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 P+	 CH+ / Page+
 Vol-	 Vol-
 Simplink	 Sound / Title
 P-	 CH- / Page-





	Originale	Sostituto	Originale	Sostituto
	Mute	 Mute / Dimmer		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Stop	 Stop / Hold		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Subtitle	 Subtitle / EQ		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Text	 Text / Goto		
	T.Opt	 Setup / OPT /		

