










 



 





 



 

 






 






 



 



 




 





 

















Originale	Sostituto
 Open / Close	 Eject / Surround
 Set Up	 Setup / OPT /
 Mute	 Mute / Dimmer
 On / Stand-by	 Power
 Title	 Sound / Title
 Subtitle	 Subtitle / EQ
 Language	 Shift + Audio / Lang I/II
 Display	 Display / Media
 DVD	 Shift + 2
 TUNER	 Shift + 6
 AUX	 Shift + 7
 Menu / PBC	 Menu / Home
 Up	 Up
 St/Mo	 Shift + Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right

Originale	Sostituto
 Prog	 TV/Radio /
 Down	 Down
 Sleep	 Sleep / Timer
 Slow / Memory	 Shift + Play /
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold
 << / Preset-	 << / Tune-
 << / Preset-	 Shift + I<< / Preset-
 >> / Preset+	 >> / Tune+
 >> / Preset+	 Shift + >>I / Preset+
 I<< / Tuning-	 I<< / Preset-
 I<< / Tuning-	 Shift + << /
 >>I / Tuning+	 Shift + >> /
 >>I / Tuning+	 >>I / Preset+
 Listening	 D.Menu / Top
 Mode	 Smart / List
 Adj/Vol-	 Vol-





Originale		Sostituto	
	Adj/Vol+		Vol+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>10		Guide / EPG / -/--
	Step		Pause / Step / Freeze
	Direct		AV / Input / RDS
	Return		Back / Return
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat

Originale		Sostituto	
	Angle		Info / Angle
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II
	NTSC/PAL		Picture / Format

