



Originale	Sostituto	Originale	Sostituto
Power	Power	5	5
Display	Display / Media	6	6
Open/Close	Eject / Surround	Step	+ Shift + Pause / Step /
Language	Audio / Lang I/II	7	7
Angle	Info / Angle	8	8
Subtitle	Subtitle / EQ	9	9
Prog	TV/Radio /	Resume	Smart / List
Mute	Mute / Dimmer	10+	Guide / EPG / -/-
PDVD	AV / Input / RDS	0/10	0
Time	Sleep / Timer	Clear	Exit / Cancel / Clear
Zoom	Zoom / Size	Echo-	CH- / Page-
A-B	Yellow / YouTube / Repeat	Echo+	CH+ / Page+
1	1	Volume-	Vol-
2	2	Volume+	Vol+
3	3	Menu/View	Menu / Home
Repeat	Green / APP / Repeat	Up	Up
4	4	Title	Sound / Title

Originale	Sostituto	Originale	Sostituto
5	5	6	6
Step	+ Shift + Pause / Step /	7	7
8	8	9	9
Resume	Smart / List	10+	Guide / EPG / -/-
0/10	0	Clear	Exit / Cancel / Clear
Echo-	CH- / Page-	Echo+	CH+ / Page+
Volume-	Vol-	Volume+	Vol+
Menu/View	Menu / Home	Up	Up
Title	Sound / Title		



