 

 



















 









 




 





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Lang	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 Tv/Radio	 TV/Radio /
 7	 7
 8	 8
 9	 9
 Dev.List	 Smart / List
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return

Originale	Sostituto
 Info	 Info / Angle
 Menu	 Menu / Home
 Up/CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 Enter	 OK
 Right	 Right
 Vol+	 Vol+
 Text	 Text / Goto
 Down/CH-	 Down
 EPG	 Guide / EPG / -/-
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 I<<	 I<< / Preset-
 Rec	 Rec / Rec Mode





Originale	Sostituto
Pause	Pause / Step / Freeze
>>	>> / Tune+
Page Up	CH+ / Page+
Page Down	CH- / Page-
>>I	>>I / Preset+
HDMI	Shift + 0
Zoom	Zoom / Size
Subtitle	Subtitle / EQ
Filelist	Setup / OPT /
Goto	Shift + Text /
Repeat	Shift + Green / APP /
Timeshift	Picture / Format
Auto	D.Menu / Top
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Originale	Sostituto

