

 





 

 

 

 

 



 





 

 

 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Open/Close/Tv	 Eject / Surround
 4	 4
 5	 5
 6	 6
 Recall/Goto	 Fav / Marker / PC
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Menu	 Menu / Home
 Source	 AV / Input / RDS
 UP	 Up

Originale	Sostituto
 Left	 Left
 OK	 OK
 Right	 Right
 DVD Menu	 D.Menu / Top
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Sound	 Sound / Title
 CH+	 CH+ / Page+
 Vol-	 Vol-
 PIC	 Picture / Format
 CH-	 CH- / Page-
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 Rec/DVD Setup	 Rec / Rec Mode
 Tv/Radio	 TV/Radio /
 Text	 Text / Goto





Originale	Sostituto
Play/Pause/EPG	Play / Slow
Stop/FAV	Stop / Hold
Info	Info / Angle
Red/DVD/USB	Red / Netflix / Search
Green/Title	Green / APP / Repeat
Yellow/PBC	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Play/Return	Shift + Play /
Pause/Display	Shift + Pause / Step /
Stop/DVD Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Reveal	Display / Media
Hold	Shift + Stop /

Hold

Originale	Sostituto
List	Smart / List
Index	Guide / EPG / -/-
Subpage	Back / Return
Size	Zoom / Size
Mix	Setup / OPT /
Freeze	Pause / Step / Freeze

