





 

 









 

 



























 








 
 




Originale	Sostituto
 Tv/AV	 AV / Input / RDS
 Power	 Power
 Multimedia	 Display / Media
 PIP	 Zoom / Size
 Zoom-	 Shift + CH- /
 Zoom+	 Shift + CH+ /
 Mute	 Mute / Dimmer
 Text/*	 Text / Goto
 Sleep	 Sleep / Timer
 List	 Smart / List
 I/II	 Audio / Lang I/II
 Menu	 Menu / Home
 ARC	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Up	 Up
 Right	 Right

Originale	Sostituto
 OK	 OK
 Down	 Down
 Red/PIP PR-	 Red / Netflix / Search
 Green/PIP PR+	 Green / APP / Repeat
 Yellow/Swap	 Yellow / YouTube / Repeat
 Blue/PIP Input	 Blue / Prime Video / Random
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-
 SSM	 Shift + Smart / List
 PSM	 Shift + Display / Media
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5



 







 











 












 

 

 



 







 





 





 

Originale	Sostituto
 Power	 Power
 Menu	 Menu / Home
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+



 

 







 

 



 

 







 



 





Originale	Sostituto
 Power STB	 Power
 Mute STB	 Mute / Dimmer
 Tv/AV STB	 AV / Input / RDS
 Menu STB	 Menu / Home
 Up STB	 Up
 Left STB	 Left
 OK STB	 OK
 Right STB	 Right
 Down STB	 Down
 Vol+ STB	 Vol+
 PR+ STB	 CH+ / Page+
 Vol- STB	 Vol-
 PR- STB	 CH- / Page-
 1 STB	 1
 2 STB	 2
 3 STB	 3
 4 STB	 4

Originale	Sostituto
 5 STB	 5
 6 STB	 6
 7 STB	 7
 8 STB	 8
 9 STB	 9
 0 STB	 0
 Power Cable	 Shift + Power
 Mute Cable	 Shift + Mute / Dimmer
 Menu Cable	 Shift + Menu /
 Up Cable	 Shift + Up
 OK Cable	 Shift + OK
 Down Cable	 Shift + Down
 Vol+ Cable	 Shift + Vol+
 PR+ Cable	 Shift + CH+ /
 Vol- Cable	 Shift + Vol-
 PR- Cable	 Shift + CH- /
 1 Cable	 Shift + 1





Originale	Sostituto
 Power VCR	 Power
 Tv/AV VCR	 AV / Input / RDS
 PR+ VCR	 CH+ / Page+
 PR- VCR	 CH- / Page-
 1 VCR	 1
 2 VCR	 2
 3 VCR	 3
 4 VCR	 4
 5 VCR	 5
 6 VCR	 6
 7 VCR	 7
 8 VCR	 8
 9 VCR	 9
 0 VCR	 0
 Play VCR	 Play / Slow
 Pause VCR	 Pause / Step / Freeze
 Stop VCR	 Stop / Hold

Originale	Sostituto
 Rec VCR	 Rec / Rec Mode
 << VCR	 << / Tune-
 >>	 >> / Tune+
 Power Audio	 Shift + Power
 Vol+ Audio	 Vol+
 Vol- Audio	 Vol-
 Mute Audio	 Mute / Dimmer

