



Originale	Sostituto
	Power
	3
	6
	5
	7
	TV/Radio /
	Smart / List
	Display / Media
	Vol-
	Vol+
	I<< / Preset-
	>>I / Preset+
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+

Originale	Sostituto
	Rec / Rec Mode
	Shift + Rec / Rec Mode
	OK
	Subtitle / EQ
	Shift + Mute / Dimmer
	Sleep / Timer
	Shift + Sleep / Timer
	Down
	Up
	CH- / Page-
	CH+ / Page+
	8
	Mute / Dimmer


























 

 
 



 







Originale	Sostituto
	Standby / Power
	CD / 3
	Tuner / 6
	Tape / 5
	AUX / 7
	Repeat / Green / APP / Repeat
	Program / TV/Radio /
	Shuffle / Blue / Prime Video / Random
	Tape A/B / Smart / List
	Display/Clock / Display / Media
	Vol- / Vol-
	Vol+ / Vol+
	I< Preset / I<< / Preset-
	Preset >I / >>I / Preset+
	Stop / Stop / Hold
	Play / Play / Slow
	Pause / Pause / Step / Freeze










 









 

 







Originale	Sostituto
	<< / Tune-
	>> / Tune+
	Tape Rec / Rec / Rec Mode
	USB Rec / Shift + Rec / Rec Mode
	Snooze / OK
	Inc. Surr. / Subtitle / EQ
	DIM / Shift + Mute / Dimmer
	Sleep/Timer / Sleep / Timer
	Timer On/Off / Shift + Sleep / Timer
	Bass- / Down
	Bass+ / Up
	Treble- / CH- / Page-
	Treble+ / CH+ / Page+
	USB / 8
	Mute / Mute / Dimmer







Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 >>	 >> / Tune+
 CD	 3	 Tape Rec	 Rec / Rec Mode
 Tuner	 6	 USB Rec	 Shift + Rec / Rec Mode
 Tape	 5	 Snooze	 OK
 AUX	 7	 Inc.Surr.	 Subtitle / EQ
 Repeat	 Green / APP / Repeat	 DIM	 Shift + Mute / Dimmer
 Program	 TV/Radio /	 Sleep/Timer	 Sleep / Timer
 Tape A/B	 Smart / List	 Timer On/Off	 Shift + Sleep / Timer
 Display/Clock	 Display / Media	 Bass-	 Down
 Vol-	 Vol-	 Bass+	 Up
 Vol+	 Vol+	 Treble-	 CH- / Page-
 I< Preset	 I<< / Preset-	 Treble+	 CH+ / Page+
 Preset >I	 >>I / Preset+	 USB	 8
 Stop	 Stop / Hold	 Mute	 Mute / Dimmer
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		

Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 >>	 >> / Tune+
 CD	 3	 Tape Rec	 Rec / Rec Mode
 Tuner	 6	 USB Rec	 Shift + Rec / Rec Mode
 Tape	 5	 Snooze	 OK
 AUX	 7	 Inc.Surr.	 Subtitle / EQ
 Repeat	 Green / APP / Repeat	 DIM	 Shift + Mute / Dimmer
 Program	 TV/Radio /	 Sleep/Timer	 Sleep / Timer
 Tape A/B	 Smart / List	 Timer On/Off	 Shift + Sleep / Timer
 Display/Clock	 Display / Media	 Bass-	 Down
 Vol-	 Vol-	 Bass+	 Up
 Vol+	 Vol+	 Treble-	 CH- / Page-
 I< Preset	 I<< / Preset-	 Treble+	 CH+ / Page+
 Preset >I	 >>I / Preset+	 USB	 8
 Stop	 Stop / Hold	 Mute	 Mute / Dimmer
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		







