 











 











 

























 
















 




Originale		Sostituto		Originale		Sostituto	
	1-2-3 Menu		TV/Radio /		OK/Prog		OK
	Eject		Eject / Surround		Data On Screen		Display / Media
	Encore		Smart / List		AV		AV / Input / RDS
	Power		Power		Vol+		Vol+
	1		1		Tv Chanel+		CH+ / Page+
	2		2		Counter Reset		Back / Return
	3		3		Tv Power		Shift + Power
	Cancel		Exit / Cancel / Clear		Vol-		Vol-
	4		4		Tv Channel-		CH- / Page-
	5		5		Play		Play / Slow
	6		6		Stop		Stop / Hold
	SP/LP		Setup / OPT /		Play		>> / Tune+
	7		7		Rec		Rec / Rec Mode
	8		8		Menu		Menu / Home
	9		9		Pause		Pause / Step / Freeze
	-/-		Guide / EPG / -/-		<  Shuttle/Index		I<< / Preset-
	0		0				





Originale		Sostituto		Originale		Sostituto	
	▼Jog/-		Down				
	▲Jog/+		Up				
	Shuttle/Index I>		>>I / Preset+				

