


























 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	Tv Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 4		Eco		D.Menu / Top
	AUX1		Shift + 5		Volume-		Vol-
	Tuner		Shift + 6		Info		Info / Angle
	Bluetooth		Shift + 9		Up		Up
	AUX2		Shift + 7		Option		Shift + Setup / OPT / Tools
	Game		Shift + Guide / EPG / -/--		Left		Left
	Phono		Guide / EPG / -/--		Enter		OK
	USB		Shift + 8		Right		Right
	Media Player		Display / Media		Back		Back / Return
	CD		Shift + 3		Down		Down
	Heos		Shift + Fav / Marker / PC		Setup		Setup / OPT /
	Internet Radio		Smart / List		Home		Menu / Home
	CH/Page+		CH+ / Page+		Stop		Stop / Hold





Originale	Sostituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 5
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Guide / EPG / -/-
 AUX2	 Shift + 7
 Phono	 Guide / EPG / -/-
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + Fav / Marker / PC
 Internet Radio	 Smart / List
 CH/Page+	 CH + / Page+

Originale	Sostituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+













 


































 








 






 
 





	Originale	Sostituto	Originale	Sostituto
		<<		<< / Tune-
		>>		>> / Tune+
		Smart Select 1		Sound / Title
		Smart Select 2		Audio / Lang I/II
		Smart Select 3		Subtitle / EQ
		Smart Select 4		Eject / Surround
		1		1
		2		2
		3		3
		4		4
		5		5
		6		6
		7		7
		8		8
		9		9
		0		0
		Enter		Fav / Marker / PC





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	Tv Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 4		Volume-		Vol-
	AUX1		Shift + 5		Up		Up
	Tuner		Shift + 6		Left		Left
	Bluetooth		Shift + 9		Right		Right
	Game		Shift + Guide / EPG / -/-		Back		Back / Return
	AUX2		Shift + 7		Down		Down
	Phono		Guide / EPG / -/-		Home		Menu / Home
	USB		Shift + 8		Stop		Stop / Hold
	Media Player		Display / Media		Pause		Pause / Step / Freeze
	CD		Shift + 3		Play		Play / Slow
	Internet Radio		Shift + Fav / Marker / PC		I<</Tune-		I<< / Preset-
	Internet Radio		Smart / List		>>I/Tune+		>>I / Preset+
	CH/Page+		CH+ / Page+		<<		<< / Tune-



