 





Originale	Sostituto
 Direct Play (--)	 Red / Netflix / Search
 Direct Play OO	 Green / APP / Repeat
 Direct Play Y	 Yellow / YouTube / Repeat
 Direct Play [*]	 Blue / Prime Video / Random
 Menu	 Menu / Home
 >>	 >> / Tune+
 Cancel	 Exit / Cancel / Clear
 I<</-	 I<< / Preset-
 Stop	 Stop / Hold
 >> /+	 >> / Preset+
 Set	 Setup / OPT /
 <<	 << / Tune-
 AUX	 7
 Sound	 Sound / Title
 Display	 Display / Media
 Power	 Power
 Volume-	 Vol-

Originale	Sostituto
 Volume+	 Vol+

